

A special phone for children's safety

iBaby A88 User Guide



DECLARATION OF COPYRIGHT

The copyright of this product (includes the related hardware, software & packages) belongs to our company. Customer shall not duplicate, decompile, disassemble, decrypt or extract without our agreement.

If you have a problem that cannot be solved by using this guideline, please contact our company, agents or vendor. Our company would not take any responsibility for any possibility aftereffects brought by this guideline.

Improvements and changes to this user guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by our company at any time without notice.

2008 / 10 / 06

Ver. 1.0

Index

ATTENTION	29
1. GETTING START	31
INSTALL AND REMOVE THE BATTERY	31
INSTALL OR REMOVE THE SIM CARD.....	31
CHARGING THE BATTERY	33
SWITCHING THE PHONE ON OR OFF	33
REGISTRATION PROCEDURE.....	33
WORK MODE	34
2. YOUR PHONE	35
KEYBOARD ILLUSTRATION	35
RESET	37
LOCK THE KEYBOARD	37
SCREEN DISPLAY AND OPERATION	37
3. ABOUT SETTING	39
SET TIME.....	39
SET DATE	40
CHANGE PASSWORD.....	40
RESTORE DEFAULT	40
SCHEDULE POWER ON.....	41
SCHEDULE POWER OFF	41
RINGTONE SETTING.....	41
4. CALLING FUNCTION	42
MAKING A CALL	42
ANSWERING A CALL	42
TALK-TIME OPERATION.....	42
CALLS	42
5. CARDS	43
ADD A PHONE NUMBER	43
DELETE A PHONE NUMBER.....	43
6. SHORT MESSAGE	43
WRITING AND SENDING A MESSAGE.....	43
RECEIVED MESSAGE	44
SENT MESSAGE.....	44
PHRASE	44
7. SUPERVISOR FUNCTION	45
FORBIDDEN IN CLASS	45

CALL TIME LIMIT	46
DEFEND SETTINGS	46
CHILD POSITION	47
PARENTS MONITORING.....	48
8. TOOLS	49
ALARM.....	49
STOPWATCH.....	49
9. GAMES	49
APPENDIX 1. SOLUTION FOR QUESTIONS	50
APPENDIX 2. THE MESSAGE FORMAT OF COMMANDS.....	51

Attention

Thank you for choosing this iBaby phone, please read this information before using your mobile phone. These instructions are intended for your safety. Please follow these guidelines.

Attention in operation about this product

- ✧ To avoid the losing or destroy of your data, please save your data separately. Our company does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss.
- ✧ Recommend use the original accessories or the only accessories approved by our company for safe and efficient use of the products. The warranty does not cover product failures which have been caused by use of accessories or other peripheral devices that our company does not approved.
- ✧ Do not attempt to disassemble the product, otherwise we would not guarantee to keep the product in good repair.
- ✧ When it is in low battery, please charge the battery in time to avoid any lost of your information and personal setting.
- ✧ Keep the product away from magnetic materials.
- ✧ Keep little metal parts (ex. thumb pin) away from the earphone of the product. It might hurt the product and you body because of the magnetic performance.
- ✧ Do not place the product near your ear when pressing the keyboard.

For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal.

- ◆ ROAD SAFETY COMES FIRST
Do not uses a hand-held phone while driving; park the vehicle first.
- ◆ INTERFERENCE
All wireless phones may get interference which could affect performance.
- ◆ SWITCH OFF IN HOSPITALS
Follow any regulations or rules. Switch phone off near medical equipment.
- ◆ SWITCH OFF IN AIRCRAFT
Wireless phones can cause interference. Using them on aircraft is illegal.
- ◆ SWITCH OFF WHEN REFUELING
Don't use phone at a refueling point. Don't use near fuel or chemicals.
- ◆ SWITCH OFF NEAR BLASTING
Don't use phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

- ◆ **USE SENSIBLY**
Use only in normal position (to ear). Don't cover the antenna unnecessarily.
- ◆ **USE QUALIFIED SERVICE**
Only qualified service personnel must install or repair equipment.
- ◆ **ACCESSORIES AND BATTERIES**
Use only approved accessories and batteries. Do not connect incompatible products.
- ◆ **CONNECTING TO OTHER DEVICES**
When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

Care and maintenance

The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years:


- ✧ Keep the product dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- ✧ Do not use or store it in dusty, dirty areas. Its moving parts can be damaged.
- ✧ Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- ✧ Do not store it in cold areas. When the phone warms up (to its normal temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- ✧ Do not attempt to open it. Non-expert handling of the device may damage it.
- ✧ Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- ✧ Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth slightly dampened in a mild soap-water solution.
- ✧ If the phone, battery, charger or any accessory are not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.
- ✧ Please contact your local city office for detailed information about recycling the package, the phone and the accessories.

1. Getting Start

Install and remove the battery

◆ Install the battery

- ✧ Put the phone upside down, take out the plastic stopple, and unscrew the screw.
- ✧ Slide the cover and remove it.
- ✧ Align the golden connectors on the battery with the corresponding connectors on the phone and push the opposite end of the battery until it snaps into the proper place.
- ✧ Insert the two catches of the back cover in the corresponding slots in the phone and slide the cover towards the bottom of the phone until it locks into proper place.
- ✧ Tighten the screws, put back the plastic stopple.

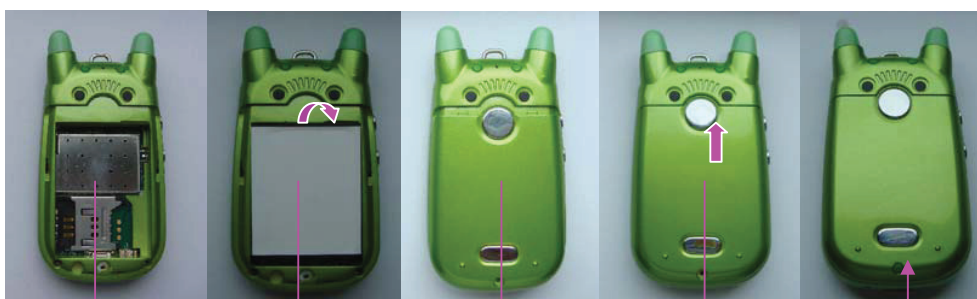

Remove the battery cover

Install the battery

Slide the battery cover

Lock the cover

Tighten the screw, put back the plastic stopple

◆ Remove the Battery

- ✧ Put the phone upside down, take out the plastic stopple, and unscrew the screw.
- ✧ Slide the cover and remove it.
- ✧ Lift the battery from the top-right of the battery where the cover is concave, and then remove the battery.

⚠NOTE:

1. Before removing the battery, always make sure that the phone is switched off and then remove the battery.
2. Please keep the battery properly. If you do not use the phone, please remove the battery and keep the battery at a dry and shade place.

Install or remove the SIM card

◆ Insert the SIM card

- ✧ Remove the cover and the battery
- ✧ Slide the SIM card cover to the left as shown in picture.
- ✧ Lift the SIM card cover, put in the SIM card.
Make sure that the golden connectors on the card are facing downwards and that the beveled corner is on the top right.
- ✧ Lay down the SIM card cover, slide it to right, and lock it to the proper place.



Remove the battery cover and battery, then slide the SIM card cover left



Open the SIM card cover, put in the SIM card



Slide the SIM card cover right and lock it

◆ Remove the SIM card

Remove the back cover and the battery.

- ✧ Slide the SIM card cover to the left as shown in picture.
- ✧ Lift the SIM card cover, take out the SIM card
- ✧ Lay down the SIM card cover, slide it to right, and lock it to the proper place.



Remove the battery cover and battery, slide the SIM card cover left



Lift the SIM card cover, take out the SIM card



Slide the SIM card cover right and lock it.

⚠NOTE:

1. Keep all miniature SIM cards out of small children's reach.
2. The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting or removing the card.

3. Please obtain the network service of the caller displaying.

Charging the Battery

New battery is not fully charged. When the power is not enough, please charge it in time, otherwise the phone would turn off automatically, so, please fully charge the battery before use, and need to follow below measures:

- ✧ Connect the lead from the charger to the base of the phone.
- ✧ Connect the charger to an AC wall outlet. The battery indicator bar starts scrolling. The phone can be used while charging if it is switched on.
- ✧ If the battery is totally run down, it may tuck up to a few minutes before the charging indicator is shown.
- ✧ When the battery is fully charged, the bar stops scrolling. Disconnect the charger from the AC outlet and the phone.

NOTE:

You can use the USB line connect PC computer for charging.

Switching the phone on or off

- ✧ Press and hold the hang up button about 2 seconds to turn on the phone.
- ✧ Phone turns into standby screen.
- ✧ Press and hold the hang up button about 2 seconds again to turn off the phone.

NOTE:

Turn on the phone after inserts the SIM card; you can use it after correctly registration.

Registration procedure

- ✧ Insert child's SIM card into the phone and turn on.
- ✧ Make sure your child's phone is power on, use your own phone to send a registration message to the child's phone, for detail information about the message, please refer to Appendix 2.
- ✧ After registration is succeed, you would receive a message replied from your child's phone, it shows like this:"XXX (your child's name which is already registered before)'s phone register ok. The monitor password of XXX is xxxxxx, please keep it properly".

NOTE:

1. You'd better use your own phone to registrate, otherwise you can not supervise your child's phone with your own phone.
2. The password is very important, once other people get it, they might supervise your

child's phone too, and our company will not take any responsibility for any result because of this.

3. It may have some fee for the registration, related information please refer to local service agency.

Work Mode

This product has parents mode and child mode, the default mode is parents mode. You can change the mode in the menu. But you need the registration password for change the child mode to parents mode.

◆ Parents mode

In this mode, all functions of the phone are available, you can set and limit the function in child mode.

◆ Child mode

In this mode, only the function you set is available. Nobody can change it except inputting the password, so you no need to worry about your child use the phone to do other things. There are two statuses for this mode, normal and forbidden in class. In normal status, the below functions are available: Cards, Short message, Schedule alarm, Stop watch and Games. If the forbidden in class status is ON, the phone will automatically switch to the forbidden status when the time is reached, at this moment, only the Schedule alarm and Stop watch functions are available.

2. Your Phone

Keyboard illustration



Keyboard	Function	
	Parents Mode	Child Mode
Up and Down key	<ul style="list-style-type: none"> ➤ In standby screen, switch function menu. ➤ During calling time, you can control the volume through the up and down button on the side. ➤ Scroll menu and text. 	The same with Parents Mode
Dialing key	<ul style="list-style-type: none"> ➤ In standby screen, press this button to look new event. ➤ In standby screen, press any hotkey and then the dialing key, the corresponding number could be called out. ➤ Accept the calling. ➤ Dial the number from Cards. ➤ Send SMS. ➤ Confirm or enter the next menu. 	The same with Parents Mode
Hang up key	<ul style="list-style-type: none"> ➤ Hold 2 seconds to turn on the phone. ➤ Hold 2 seconds to turn off the phone in standby screen. ➤ Reject the calling/end a call. ➤ Cancel or back to the previous menu. 	<ul style="list-style-type: none"> ➤ Hold 2 seconds to turn on the phone. ➤ Hold 2 seconds and input the correct password to turn off the phone in standby screen. ➤ Others just the same with parents mode
Hotkey 1	<ul style="list-style-type: none"> ➤ In standby screen, hold this key for dialing out the 1st number in Cards. ➤ In standby screen, press this key to show 1st number in Cards. ➤ Others for delete function. 	<ul style="list-style-type: none"> ➤ In any conditions, hold this key for dialing out the 1st number in Cards. ➤ In standby screen, press this key to show the 1st number in Cards and press the dialing key to call.
Hotkey 2	<ul style="list-style-type: none"> ➤ In standby screen, hold this key for dialing out the 2nd number in Cards. ➤ In standby screen, press this key to show the 2nd number in Cards. ➤ Others for delete function. 	<ul style="list-style-type: none"> ➤ In any conditions, hold this key for dialing out the 2nd number in Cards. ➤ In standby screen, press this key to show the 2nd number in Cards and press the dialing key to call.

Hotkey 3	<ul style="list-style-type: none"> ➤ In standby screen, hold this key for dialing out the 3rd number in Cards. ➤ In standby screen, press this key to show the 3rd number in Cards. ➤ Input the special symbols in Telephone function. 	<ul style="list-style-type: none"> ➤ In any conditions, hold this key for dialing out the 3rd number in Cards. ➤ In standby screen, press this key to show the 3rd number in Cards and press the dialing key to call.
Hotkey 4	<ul style="list-style-type: none"> ➤ In standby screen, hold this key for dialing out the 4th number in Cards. ➤ In standby screen, press this key to show the 4th number in Cards. ➤ Input the special symbols in Telephone function. 	<ul style="list-style-type: none"> ➤ In any conditions, hold this key for dialing out the 4th number in Cards. ➤ In standby screen, press this key to show the 4th number in Cards and press the dialing key to call.
Emergency calling key	<ul style="list-style-type: none"> ➤ In standby screen, hold this key to call the first 4 numbers in Cards in turn, until one of the callings is answered, and it will send an emergency message to the numbers that didn't answer. ➤ In phone number inputting screen or password inputting screen, confirm the selected number and symbol. 	<ul style="list-style-type: none"> ➤ In any conditions, hold this key to call the first 4 numbers in Cards in turn, until one of the callings is answered, and it will send an emergency message to the numbers that didn't answer. ➤ In password inputting screen, confirm the selected number.

Reset

If the phone doesn't work normally (no responds for any key inputted), use a slender thing to insert the Reset hole in the back of the phone.

Lock the keyboard

In standby screen, press the hang up key first, and then press the dialing key within 3 seconds, the keyboard will be locked.

Once the keyboard is locked, press the dialing key first, and then press the hang up key within 3 seconds, the keyboard will be unlocked.

Screen display and operation

◆ Standby screen

After turn on the phone, it enters the standby screen.

- If no unread short messages or missed call, the screen shows the time, date and network in turn as pictures below:



- If there is unread short message or missed call, the screen shows the related message, press the dialing key to view the information.

◆ Status bar

It shows on the top of the screen with different icons.

Icon	Description	
	Parents Mode	Child Mode
	Signal situation, more lines, more signal, others on the contrary	The same as parents mode
	Small triangle icon means your signal wandering in different network	The same as parents mode
	This icon is not exist	In the condition of forbidden in class
	Ring function is turn on	The same as parents mode
	Ring function is turn off	The same as parents mode
	Alarm bell is turn on	The same as parents mode
	Battery capacity indication, it would be shining during the course of charge	The same as parents mode
	This icon is not exist	Child mode is turn on

◆ Function List

Use up and down key to choose the function in menu, and the functions list is different between in parents mode and child mode.

In Parents mode:

Main Menu	Submenu
Cards	
Short Message	Write message, Read message, Outbox, Phrase
Calls	Missed Call, Answered Call, Dialed Call
Telephone	
Child Position	Position Analysis, Position Validation, Schedule Notice
Forbidden in Class	Status, Restriction Time
Call Time Limit	
Defend Setting	State, Auto Warning, Notify number, Help
Ringtone Setting	Ring Mode, Mute Mode, Personalized Caller Ringtone
System Settings	Set time, Set date, Change password, Switch Language, Restore default.
Schedule Power on	State, Power on Time
Schedule Power off	State, Power off Time
Alarm	
Stop Watch	
Games	Tetris, Snake
Access Child Mode	

Press the dialing key to confirm the selection, press the hang up key to return.

In Child Mode:

Main Menu	Submenu
Cards	
Short Message	Write message, Read message, Outbox, Phrase
Alarm	
Stop Watch	
Games	Tetris, Snake
Switch to Parents Mode	

NOTE:

The Cards and Short message icons are not shown in the main menu when it is in the condition of forbidden in class.

WARNING:

The phone can't be switched off when it is in Child Mode. If your child will go aboard alone, please make sure the product is in Parents Mode to let the product can be switched off.

3. About Setting

Set Time

◆ **Modify the time**

Use the dialing key to move the cursor on the time number, adjust the time by pressing up and down key, and adjust the am and pm mode accordingly. Press hang up then dialing key to save the setting.

◆ **Time format**

Press up and down key to select the time format. Press dialing key to save the setting.

Set Date

◆ **Modify the date**

Use the dialing key to move the cursor on the number, adjust the date by pressing up and down key. Press hang up then dialing key to save the setting.

◆ **Date format**

Press up and down key to select the date format. Press dialing key to save the setting.

Change Password

After the first registration, you would have a password, you can change this password with following steps:

1. Input the password, use the up and down key to select the number, press the emergency calling key to confirm the selection, press the key 1 to delete the single number or press the key 2 to clear all numbers. Press dialing key to confirm.
2. Input new password.
3. Confirm new password by inputting it again.

NOTE:

1. The initial registration password is the super password, if you didn't change it, you can use this password to switch to parents mode, or restore the default setting or send supervise order; If you changed the password, you must use the new password to complete those operation; if you forget the new password, you can reset the new password with super password in change password function. Please keep your super password properly.
2. If you use your own phone to registrate again, you will receive the message "You have registered. The monitor password of XXXX is xxxxxx. Please keep it properly."

Restore default

You can reset the menu settings to their original values, for this you need the password.

WARNING:

Restore factory settings will clear all the data and can't be recovered. Please be cautious to use it.

Schedule Power on

If the status of Auto Power is ON, the phone will auto turn on when the setting time is reached.

WARNING:

This phone has the function of Auto Power on, please check it before going aboard and make sure it is no problem.

Schedule Power off

If the status of Auto Power off is ON, the phone will auto turn off when the setting time is reached.

NOTE:

The phone will not auto power off during talk-time until end the call.

Ringtone Setting

When you have an incoming call or receive a message, you can set the phone ring or keep silence. You also can select the style and volume of the ring.

◆ **Ring Mode**

You can set the Ring tone, Alert style and Ring Volume for incoming call and SMS separately.

- ◇ Ring tone
Choose the ring tone in the list, press dialing key to confirm.
- ◇ Alert style
Choose Ring or Mute here, press dialing key to confirm.
- ◇ Ring Volume
Use up and down key to adjust the volume, press dialing key to confirm.

◆ **Mute Mode**

When ON is selected, all incoming call alert, message alert, key tone and power on/off are mute.

◆ **Personalized Caller Ring**

For the first four numbers in Cards, you can select different rings to represent each number, When received the incoming call from this four numbers, the corresponding ring can be heard.

NOTE:

All the functions in chapter 3 are available in the Parents mode only.

4. Calling function

Calling function only can be used in the service area.

Making a call

◆ From Cards

Enter the menu: Cards, press up and down key to scroll to the desired number, press dialing key.

◆ From Telephone

Enter the menu: Telephone, press up and down key to select the number or symbol, press emergency calling key to confirm the number, and then press the dialing key to make a call. (This function is available in the Parents Mode only)

Answering a call

To answer an incoming call, press the dialing key, and press hang up key to reject the call.

Talk-time operation

During talking, press hang up key to finish the call.

Press the dialing key to turn on the hand free function, and press this key again to turn off.

NOTE:

This phone have the function to guard against the radiation, when the keyboard LED shining frequently, it means the radiation is too strong, suggest you get the phone away from your brain as far as possible, in order to reduce the radiation, suggest you use the hand free function during talking-time.

Calls

This function shows you the last 20 phone numbers for each missed call, answered call and dialed call.

◆ View the detail information about the call

In the call list, press up and down key to select the record, the detail information about time and date would appear when the cursor locate each record, if you want to know how long this calling is last for, press dialing key you would get it.

◆ Erase call lists

In the call list, press up and down key to scroll to the desired number, then press key 1 and dialing key to erase it.

If you want to delete all numbers, press key 2 and then dialing key to confirm.

5. Cards

It used for storing phone numbers and their related names.

Add a phone number

You can add a phone number by sending a message, detail as below:

- ✧ Make sure the child's phone is power on.
- ✧ Use your own phone to write a message to add a phone number, refer to appendix 2 about the related message format.
- ✧ Send the message to the child's phone.
- ✧ You can add more numbers with the same operation.
- ✧ You can find the number in the Cards of Child's phone.

Delete a phone number

In the cards list, press up and down key to scroll to the desired number, then press key 1 and dialing key to delete it.

If you want to delete all numbers, press key 2 and then dialing key to confirm.

NOTE:

1. The delete function is available in Parents mode only.
2. The Max. numbers can be stored is 50.
3. The phone will automatically reject the incoming call and the SMS that the number is not stored in the Cards.
4. The first 4 phone numbers in Cards are important, they could be dialed by pressing the four number keys directly. And the emergency call also call the four phone numbers, please be cautions to add.

6. Short Message

This function is used for writing and sending a message. But you just can send the message to the phone numbers that stored in the Cards only.

Also you can view the messages you received or you already sent.

Writing and sending a message

Select the Write message menu to enter:

- ✧ It shows "Who?" in the screen, press dialing key to show the phone number list, press up and down key to scroll to the desired number and press dialing key to confirm.

- ◇ When you see the sentence "what?" in the screen, press dialing key and then up and down key to choose the message, press dialing key to confirm.
- ◇ Make sure the message already ok, press dialing key to send out.

Received message

◆ **Read the new message**

When you receive a new message, you hear a message alert tone you set, and the number of new messages as well as are shown in standby screen, press dialing key to access the list and select one to read.

◆ **Read received message**

Select the Read message menu to enter, you can see all received messages, press up and down key to select one, and then press dialing key to read the detail information.

◆ **Delete received message**

In the received message list, press key 1 and the dialing key to delete a message. If you want to delete all messages, press key 2 and then dialing key to confirm.

NOTE:

The delete function is available in Parents mode only.

Sent message

◆ **Read sent message**

Select the Outbox menu to enter, all sent message will be shown, the Max. number of messages is 50. Press up and down key to select one, and then press dialing key to read the detail information.

◆ **Delete sent message**

In the sent message list, press key 1 and the dialing key to delete a message. If you want to delete all messages, press key 2 and then dialing key to confirm.

NOTE:

The delete function is available in Parents mode only.

Phrase

It stores some phrases in common use, you can directly select them for sending message. Also you can add or erase the phrase, the Max. of phrase that can be saved is 50.

◆ **Read a phrase**

In the phrase list, press up and down key to select, press dialing key to read.

◆ **Add a phrase**

You can add a phrase by sending a message, detail as below:

- ✧ Make sure the child's phone is power on.
- ✧ Use your own phone to write a message to add a phrase, refer to appendix 2 about the related message format.
- ✧ Send the message to the child's phone;
- ✧ You can add more numbers with the same operation.
- ✧ You can find the number in the Cards of Child's phone.

◆ **Delete phrase**

In the phrase list, press up and down key to scroll to the desired phrase, then press key 1 and dialing key to erase it.

If you want to delete all phrases, press key 2 and then dialing key to confirm.

NOTE:

The delete function is available in Parents mode only.

7. Supervisor Function

Forbidden in class

You can manage the time that when the communication functions are forbidden, You can set 8 periods of time for 1 day to manage the phone, once the time is limited to use the phone, any message or calling function operation would not available. When the forbidden time is over, there is alert tone or text message for all the missed call and new messages.

◆ **Set the period of time**

Enter the menu: Restriction Time, you can set the forbidden time according to School day, Saturday and Sunday.

- ✧ School day is from Monday to Friday, You can set the time for School day, Saturday & Sunday separately.
- ✧ In the class list, there are 8 period of time for each day, you can set the start time and end time for each period. A tick (√) will show if the time set is valid, or else a cross (×) will show. If the start time and end time is the same, then the time set is invalid.
- ✧ Enter the selected period, press up and down key to adjust the time. To move the cursor, press dialing key. Press hang up key after all the time set is OK. When the pop up message "Save Settings?" show, press dialing key to confirm.

◆ **Open the function of forbidden in class**

There are 2 ways to open this function:

- Open it in the phone
Enter the menu: Forbidden in Class > Status, set ON, press dialing key for confirm.
- Open it with a short message
- ✧ Use your own phone to write a message about setting the status, refer to appendix 2

about the related message format.

- ✧ Send the message to the child's phone;
- ✧ After the setting is succeed, you would receive a message replied from your child's phone, it shows like this:"The Forbidden is Class function is activated."

◆ **Close the function of forbidden in class**

The operation is the same as Open the function of forbidden in class, but the status should be set OFF.

Call Time Limit

Long talk-time is bad for your child's health, and bring you a considerable expense, to avoid this you can set talk-time limit for each call.

Enter the menu: Call Time Limit, you can choose the desired time and press dialing key to confirm.

Defend Settings

Once the phone is lost, if other person inserts a new SIM card into the phone, the phone will send you a message automatically, then you can know the person's phone number.

◆ **Activate the Setting**

Enter the menu: Defend Settings> state, select ON, press dialing key to confirm.

◆ **Set Auto Warning**

Once this function is set ON, when other person insert a new SIM card into this phone, the screen would appear a warning message: xxxxxx

◆ **Set the informed phone number**

Enter the menu: Notify number, it shows "Set Now?", press dialing key to enter the inputting number screen, then press up and down key to select the number, press emergency calling key to confirm the number, press the key 1 to delete the single number or press the key 2 to clear all numbers. Press dialing key to confirm.

NOTE:

Please make sure this phone number can receive the short message.

◆ **Delete the informed phone number**

Enter the menu: Notify number, the informed phone number shows, press the key 1 and then dialing key to delete.

◆ **Lock the phone**

Once your phone is lost, you can lock the phone so that the other person can't use it, related operation is as below:

- ✧ Use your own phone to write a message about locking the child's phone, refer to

appendix 2 about the related message format.

- ✧ Send the message to the phone number that the child's phone is using.
- ✧ The child's phone would be locked and can't be used unless the correct password is inputted.

Child Position

This function is used for getting the child's current position. For the area that the child usually stays, parents can save the position information in child's phone. If you want to know the child's position, you only need to send a message about the position checking with your own phone, and then you can receive a message about the child position.

NOTE:

Only the position information stored in child's phone can be inquired.

◆ **Position Analysis**

Put your child's phone at the proper place that you want to save the position information, enter the menu: Position Analysis, select an area (√ means this item already have position data and x means not), press dialing key to start the position analysis for this area, 5 minutes later, press dialing key again, the message "Complete, save?" will show, press dialing key to confirm and hang up key to cancel.

During the position analysis, recommend you walk around the target area several times with your child's phone. Or you can put the child's phone at the different location in the target area to analysis, the longer the time is, the more accurate the position data will be. If use the Continue Analysis function at the same place in different time, example, morning, noon and night, the position data will be more accurate.

NOTE:

The position accuracy depends on the situation of GSM network, normally the error is between 50-300 meters. At downtown where have a lot of buildings, the data could be more accurate than that at suburb, where it is open.

● **Continue Analyzing/ Re-Analyze**

Enter the menu: Position Analysis, select an area that already have data (a √ before the title), then you can choose Continue Analyzing or Re-Analyze.

For Continue Analysis, it will keep the original position data for this area and continue to analysis. In this way, the position data could be more accurate.

For Re-Analyze, it will erase all the original position data for this area and re-analysis the position data.

● **Delete the data**

Enter the menu: Position Analysis, move the cursor to the desired area that already have data (a √ before the title), press 1 key, and then press dialing key to delete the data for this area.

◆ **Position Validation**

You can validate if the position data is accurate enough or not with this function.

For example: If you have analysed the Area 1, and when the child's phone is in this area, entering Position Validation function should show Area 1. If the message "Unknown area" show, that means the data of this area is not analysed sufficiently. You need analyse this area again with Continue Analysis function.

◆ **Schedule Notice**

Set the notice timer and the notified phone number, when the time is reached, the child's phone will send a message to the phone number automatically about the child's current position. You can set three timers in total.

Enter the menu: Notifier, the pop up message "Set Now?" will show, press dialing key to enter the phone number setting screen, then select the desired number by pressing up and down key, press dialing key to confirm your selection.

Select the time one/two/three and set ON, it will show the time setting screen. Press dialing key to move the cursor, press up and down key to adjust time. After finishing your setting, press hang up key then dialing key to save your setting.

NOTE:

Please set the notified phone number that can receive the short message.

◆ **Rename the area**

- ◇ Use your own phone to edit a message about name the area, refer to appendix 2 about the related message format.
- ◇ Send the message to the child's phone.
- ◇ If the message successfully sends to the child's phone, the new area name will be shown in the child's phone.

◆ **Inquiry your child's position**

- ◇ Use your own phone to edit a message about inquiry location, refer to the appendix 2 about the related message format.
- ◇ Send the message to the child's phone.
- ◇ If the message successfully sent to the child's phone, your phone would receive a reply to show you the child's location.

Parents Monitoring

You can switch the child's phone to be sensitive microphone mode by sending a message with your own phone, then the child's phone will call you automatically, and during you answer the call, you can hear the voice from the child's environment clearer and know where your child is and what they are doing.

◆ **Start monitoring**

- ◇ Use your own phone to edit a message about monitoring, refer to appendix 2 about the related message format.
- ◇ Send the message to the child's phone.

- ✧ If your message is successfully sent, your child would feedback a call to you, at this moment you just need to answer the call to start monitoring.

◆ **End monitoring**

Hang up the call to finish the monitoring.

Or the monitoring can be interrupted if the child presses any key.

NOTE:

1. The monitoring function doesn't display in the menu.
2. All the functions in chapter 7 are available in the Parents mode only.

8. Tools

Alarm

Totally you can set 4 alarm clocks.

- ✧ Enter the alarm menu, select one and enter.
- ✧ Enter the menu: Alarm Status, set ON, and then set the time, you can refer to the section of Set Time.
- ✧ Enter the menu: Alarm Type, choose the date and press dialing key to save.
- ✧ Enter the menu: Ring Setting, choose the ring type and press dialing key to save.
- ✧ After setting, the icon of alarm would appear in the status bar.
- ✧ If you want to delete it, enter the menu: Alarm Status, set OFF and press dialing key.
- ✧ When the bell is ringing, you just need to press hang up key to stop it.

Stopwatch

- ✧ To start, press dialing key.
- ✧ To pause, press the dialing key again.
- ✧ To continue, press the dialing key again,
- ✧ To clear, just press the hang up key.

9. Games

There are two games: Tetris and Snake. You can choose a game to play in Game menu. Please refer to the instructions of each game about the rules.

There is a special function for the game that is Forbidden. When it is in the forbidden time, the child can't enter the games to play.

And the game will be auto stop after a proper period of time, to remind the child to relax their eyes.

NOTE:

The number of game might be more after upgrade the version.

Appendix 1. Solution for questions

Can not turn on the phone	<ul style="list-style-type: none"> ✧ Check the battery and make sure it is installed properly. ✧ Maybe it is low battery, please charge it in time or replace a new one.
Can not dialing or answering	<ul style="list-style-type: none"> ✧ Maybe the cellular network signal intensity is too weak. ✧ Please check in parents mode if the phone is in forbidden time.
Can not receive or send message	<ul style="list-style-type: none"> ✧ Maybe the cellular network signal intensity is too weak. ✧ Please check in parents mode if the phone is in forbidden time.
Can not hear your voice	<ul style="list-style-type: none"> ✧ maybe out of the cellular network signal area
Can not receive the command message properly	<ul style="list-style-type: none"> ✧ Please check the format of the command is right or not. ✧ Please check the network situation
Can't work normally (no responds for any key inputted)	<ul style="list-style-type: none"> ✧ Please check if the keyboard is locked or not, if yes, please press dialing key and hang up key to unlock. ✧ This case might be happened accidentally for any phone. Please use a slender thing to insert the Reset hole in the back of the phone. If it is still not OK, please contact us.
When inquiry the child's position, always feedback "unknown area".	<ul style="list-style-type: none"> ✧ Please check if the current position have been analysed. ✧ Analyse the current position with Continue Analysis function repeatedly.
forget the password	<ul style="list-style-type: none"> ✧ If you forget the password, please go to the service agency with related certificate and guarantee paper for help. ✧ Use your own phone (the 1st time registered phone) to register again, you can get the password from the reply message.

Appendix 2. The message format of commands

Note:

1. The two symbols “:” and “,” must be correctly used in the message, otherwise, the phone may not respond correctly.
2. In all the following examples, the passwords is supposed to be 200808.

Command	The message format
Register	register: child’s name,sex,age,grade Example 1: register: Lisa,female,age 8,grade 2 Example 1: register: Owen,male,age 9,grade 2
Add a phone number	addnumber:[index],name,phone number,password Example 1: addnumber:1,father,13823787867,200808 Example 2: addnumber:2,mother,13632718918,200808 Note: if using the existed index number, the existed phone number with the same index will be overwrite.
Add the common SMS	commonsms:sms content,password Example: commonsms:Do you come back, baby?,200808
Pause/Continue forbidden in class	forbiduse:on,password forbiduse:off,password Example: forbiduse:on,200808 forbiduse:off,200808
Lock up phone	lockup:password Example: lockup:200808
Startup monitor	monitor:on,password Example: monitor:on,200808
Child position	rename:oldname,newname,password This command is used for modifying the area title in Positon Analysis. Example 1: To rename the old area name “area1” to BBB, input the message as this: rename:area1,BBB,200808. Example 2: To rename the old area name BBB to AAA, input the message as this: rename: BBB,AAA,200808. inquire:password This command is used for inquiry the child’s position. Example: inquire:200808
Power off	poweroff:password Example: poweroff:200808